


 













## Package Contents






 

The u50xw package includes:

- VESA mounting hardware
- Power supply (12V 3A adapter and plug)
- Antennae (2x)
- Rubber feet
- Ethernet cable
- u50xw appliance

u50xw rear and front panels.

Rear Panel	
	12V Power input
	HD HDMI port
	SS USB3 ports
	USB2 ports
	1 Internet port
	2 LAN port
	3 LAN port (not configured)
	4 LAN port (not configured)
	Microphone (disabled)
	Audio (disabled)
	WiFi RP-SMA connector
	COM Serial port (disabled)
	Power indicator
	HD indicator
	Power button

Front Panel	
	USB2 ports
	SS USB3 ports
	HD HDMI port
	COM Serial port (disabled)
	Power indicator
	HD indicator
	Power button

## Installation

- If necessary, use the included VESA mounting hardware to mount the appliance.
- If you are not mounting the appliance, attach the included rubber feet to the bottom of the appliance.
- Fasten the included antennae to the WiFi RP-SMA connectors located on the rear panel.
- Connect the ethernet cable from your Internet modem or router to the Internet port (LAN 1) located on the rear panel.
- Connect the ethernet cable from your LAN switch to the LAN port (LAN 2) located on the rear panel.
- Plug in the power adapter to a power source and connect it to the 12V power input located on the rear panel.
- Review the power indicator on the front of the appliance. If the indicator is green, the appliance is powered on.
- If the appliance is not powered on, press the power button.

